

## Model: Toshiba BV410D

### Function: **Auto-calibrate**

How to turn off or on the Auto calibrate function on the Toshiba BV410D printer.

The calibrate function is used by the printer to sense the size of the labels. By default, this printer performs this check when the printer is turned on by feeding some labels.

To disable this function, please follow the below instructions:

Turn the printer off.

While the printer is off press and hold the <FEED> and <PAUSE> buttons, then press the power button once to turn on the printer while still holding the buttons. Once the screen displays

Initializing you can let go off the buttons.

You should now see the following screen:



Using the arrow down button <RESTART> select <2> SET PARAMETERS

Then you need to arrow down until you get to the **CALIBRATE** option.



Select this option by pressing <PAUSE>

If you want the printer to turn on without feeding labels (no calibration) set this option to **OFF**



Once the display shows CALIBRATE OFF as above, simply turn off the printer by holding the power button down. When you turn the printer on the labels will not move.

The default setting is TRANSMISSIVE (which is label gap detection). When this is selected, the printer will calibrate and check the label length each time it is turned off and on.