


Click preferences in the windows drivers, then select stock, and change the sensor setting to transmissive. This will make the printer sense the gap between the labels.

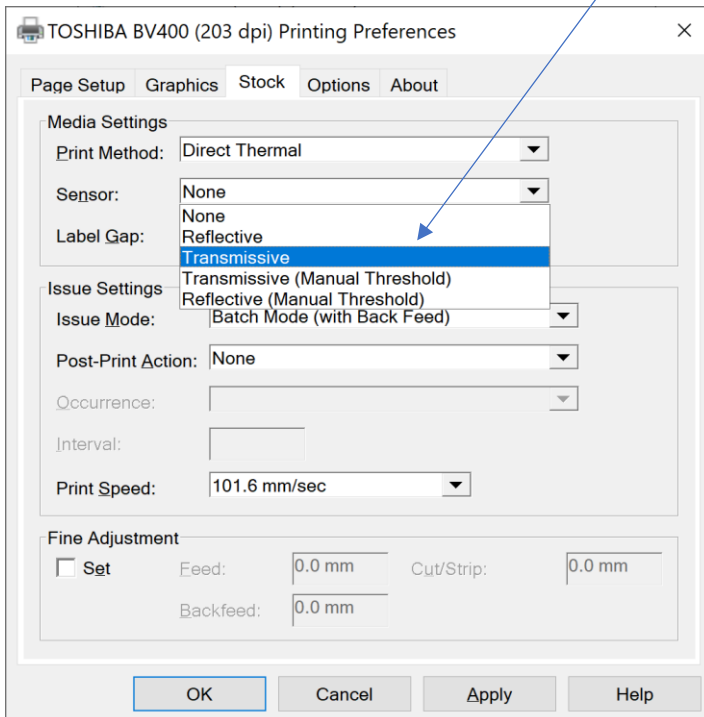

Then click apply.